INSIGNIA™

29" LCD TV

QUICK SETUP GUIDE

NS-29L120A13

Thank You

for purchasing this fine Insignia television. We hope you enjoy the quality and reliability of this product for years to come.

AC power cord

Remote control and 2 AAA batteries

Stand column

M4 screws (14 mm) (4)

Stand Base

WE ARE GOING GREEN!

A copy of your *User Guide* is not provided in the box but is available online. Go to www.insigniaproducts.com, click **Support & Service**, enter your model number in the **Product Search** field, then click **Search**.

Front features

Installing the stand

1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
2 Secure the stand column to the back of your TV with three of the provided screws.
3 Secure the stand base to the stand column with one of the provided screws.

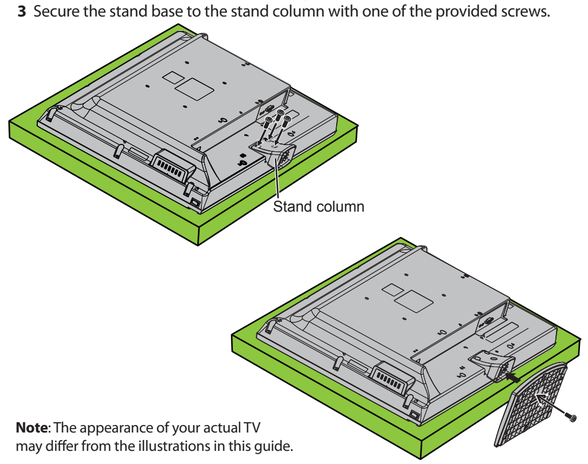

Note: The appearance of your actual TV may differ from the illustrations in this guide.

Installing a wall-mount bracket

1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
2 Attach the wall-mount bracket to your TV using the mounting holes on the back of your TV. See the instructions that came with the wall-mount bracket for information about how to correctly hang your TV.
Note: If you plan to wall-mount your TV, do not install the stand.

Warning

This apparatus is intended to be supported by a UL Listed wall mount bracket.

Identifying cables

Your TV has several connection types for connecting devices. For the best video quality, connect a device to the best available connection.

Connection type	Video quality	Cable connector
HDMI video/audio	Best	
OR		
Component video and analog audio	Better	
OR		
Composite video and analog audio	Good	

You can use the HDMI 1 (DVI) jack to connect a DVI device to your TV. You need to attach an HDMI-to-DVI adapter to the end of the HDMI cable that connects to the DVI device's jack.

Connecting a DVD or Blu-ray player, cable box, satellite receiver, camcorder, or game station

Using an HDMI cable (best)

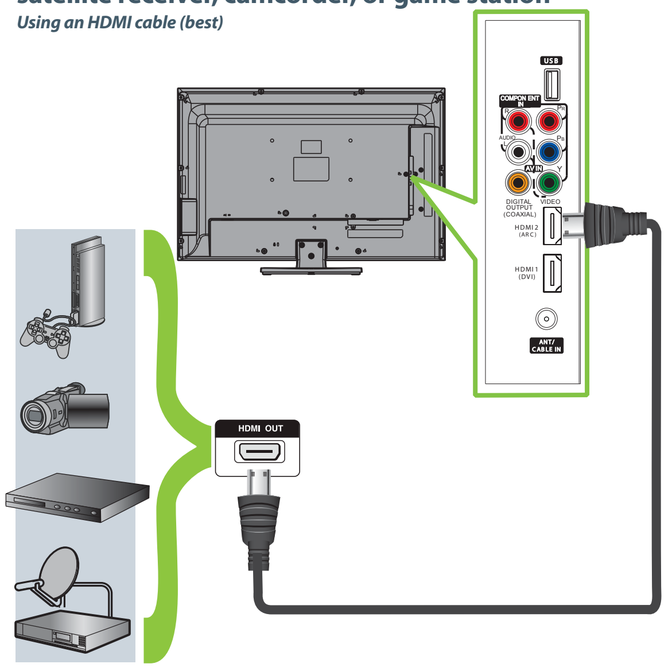

Note: Cable is not provided.

Using component cables (better)

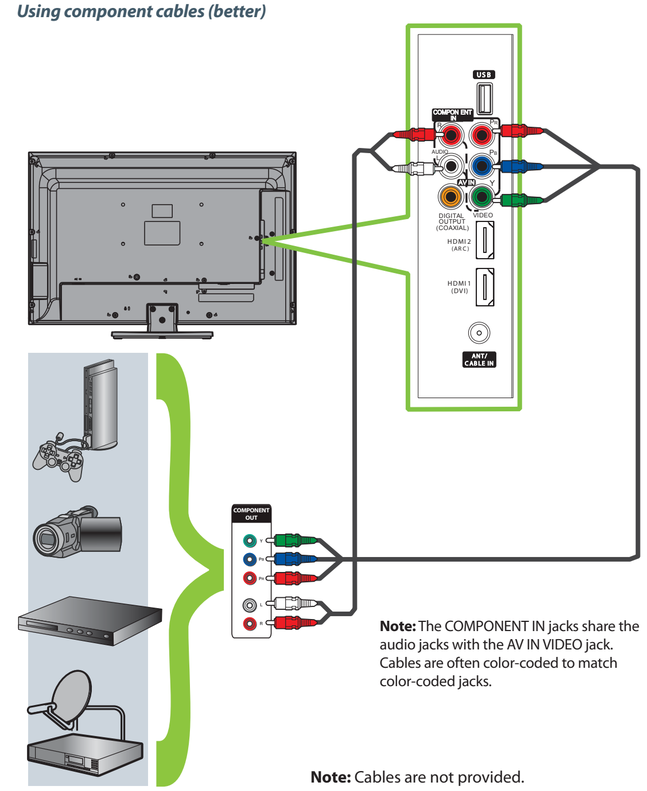

Note: The COMPONENT IN jacks share the audio jacks with the AV IN VIDEO jack. Cables are often color-coded to match color-coded jacks.

Note: Cables are not provided.

Using a composite cable (good)

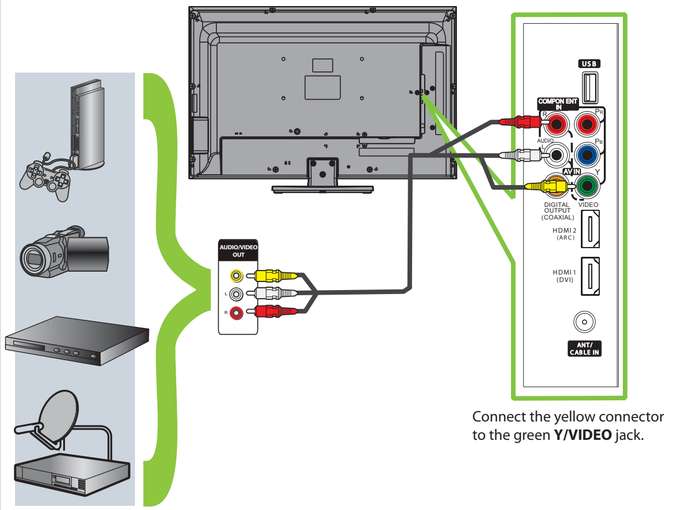

Connect the yellow connector to the green **Y/VIDEO** jack.

Note: Cable is not provided.

Connecting to an antenna/cable wall jack

Connect a coaxial cable (not included) to the **ANT/CABLE IN** jack on the side of your TV and to the antenna/cable wall jack.

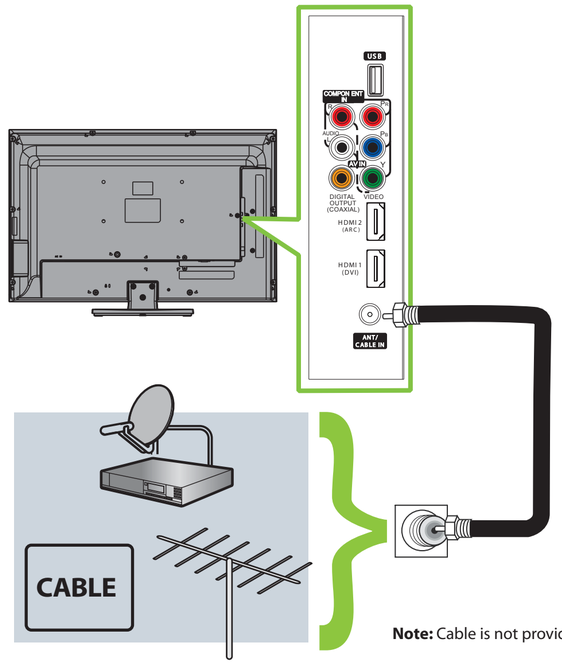

Note: Cable is not provided.

Connecting a home theater system

Using digital audio

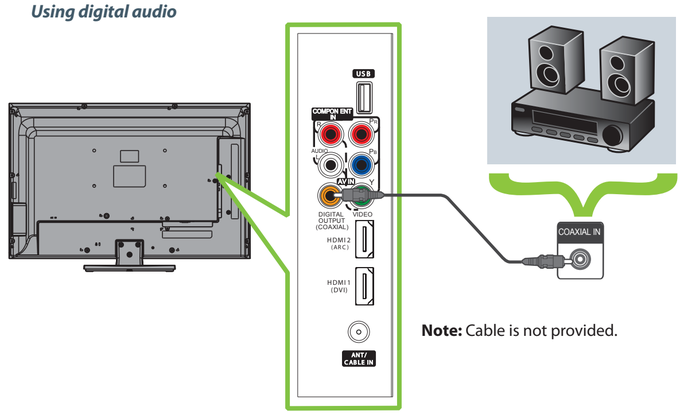

Note: Cable is not provided.

Using analog audio

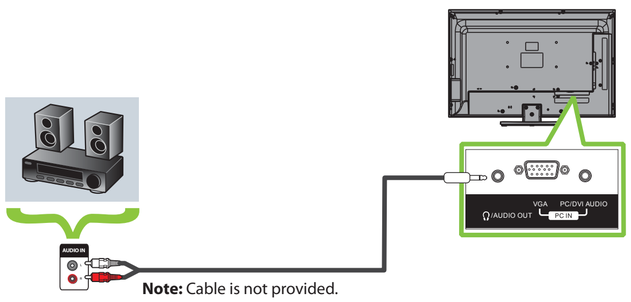

Note: Cable is not provided.

Connecting a home theater system with multiple devices

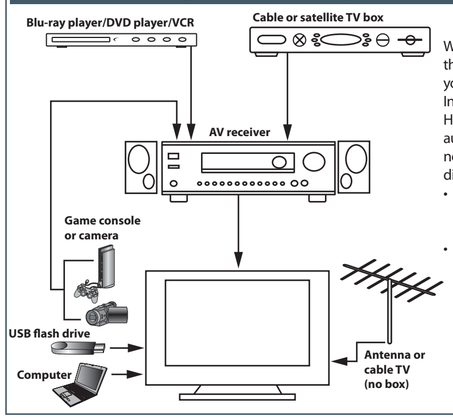

We recommend that you connect the AV receiver's **HDMI OUT** jack to your TV's **HDMI 2 (ARC)** jack.
In the following situations, the HDMI cable will route Dolby Digital audio to the AV receiver, so you do not need to connect a separate digital audio cable:

- When you have a game console connected to one of your TV's HDMI jacks.
- When you watch a program through an antenna or cable TV connected to the **ANT/CABLE IN** jack.

Connecting power

Plug the AC power cord into the **AC IN** jack on the back of your TV, then plug the other end of the cord into a power outlet.

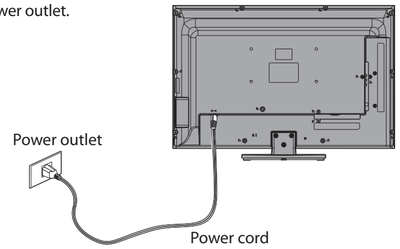

Setting up and using your remote control

1 Press the release button on the back of the remote control to remove the battery compartment cover.
2 Insert two AAA batteries into the battery compartment. Make sure that the + and – symbols on the batteries match the + and – symbols in the battery compartment.
3 Replace the cover.

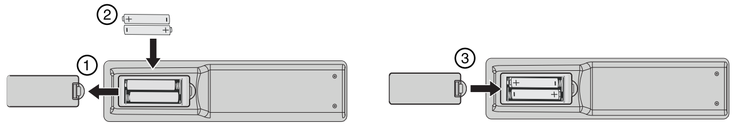

Aspect ratio options

Normal:
Displays the original 4:3 aspect ratio with vertical black bars on the left and right hand side of the screen. If the original aspect ratio is 16:9, then the image displays in 16:9.

Zoom:
Expands the image to fill the screen. The top and bottom of the image may be cropped.

Wide:
Use this option to view content in a 16:9 (wide-screen) aspect ratio.

Cinema:
Stretches the image at the edges, but keeps a clear image in the center.

Auto:
Automatically adjusts the image based on the screen size and the TV program. **Note**: **Auto** is only available when **Auto Zoom** in the *Channels* menu is set to **On.**

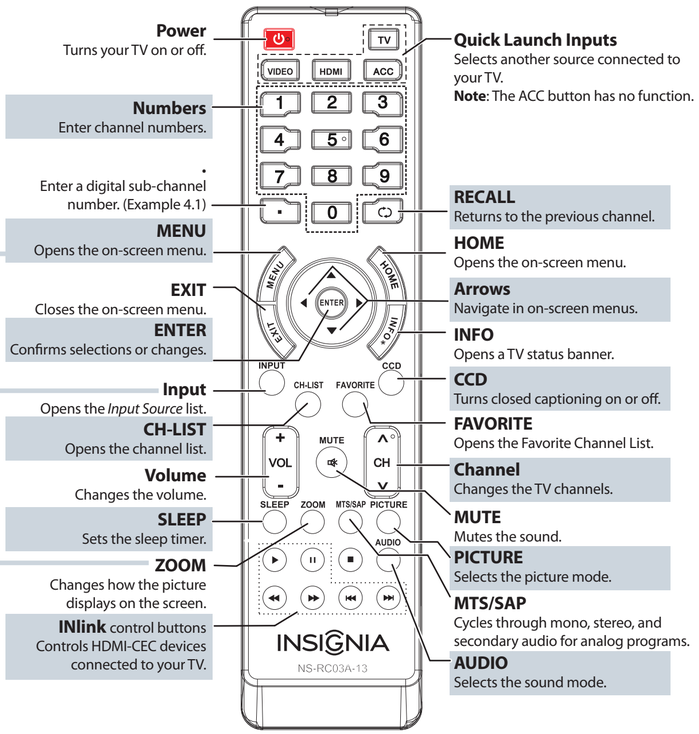

Power
Turns your TV on or off.

Numbers
Enter channel numbers.

.
Enter a digital sub-channel number. (Example 4.1)

MENU
Opens the on-screen menu.

EXIT
Closes the on-screen menu.

ENTER
Confirms selections or changes.

Input
Opens the *Input Source* list.

CH-LIST
Opens the channel list.

Volume
Changes the volume.

SLEEP
Sets the sleep timer.

ZOOM
Changes how the picture displays on the screen.

INlink control buttons
Controls HDMI-CEC devices connected to your TV.

Quick Launch Inputs
Selects another source connected to your TV.
Note: The ACC button has no function.

RECALL
Returns to the previous channel.

HOME
Opens the on-screen menu.

Arrows
Navigate in on-screen menus.

INFO
Opens a TV status banner.

CCD
Turns closed captioning on or off.

FAVORITE
Opens the Favorite Channel List.

Channel
Changes the TV channels.

MUTE
Mutes the sound.

PICTURE
Selects the picture mode.

MTS/SAP
Cycles through mono, stereo, and secondary audio for analog programs.

AUDIO
Selects the sound mode.

Programming your remote control

To program your universal remote control to work with your new Insignia TV, see the table for common codes. If you have problems programming your remote or need a different remote control code, visit www.insigniaproducts.com for the latest remote control code information.

Universal remote TV codes

Universal remote controls				Cable/Satellite/Set-top boxes									
One for All	Philips	RCA	Sony	Cablevision	Charter	Comcast	Cox	Direct TV	Dish Network	Time Warner	Tivo	Verizon
0054	**0198, 0490**	**135**	**068, 069, 078, 096, 100, 164, 168, 229, 026**	**068, 069, 078, 096, 100, 164, 168, 229, 026**	**2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586**	**10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002**	**1326, 1463**	**10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002**	**720**	**400, 450, 461, 456, 10463, 1463, 0463**	**0091**	**0198, 0490**

Turning on your TV for the first time

1 Connect your TV's power cord to your TV and a power outlet, then press ⏻ (**power**). The *Choose Your Menu Language* screen opens.
2 Press ▲ or ▼ to highlight a language, then press **ENTER**. The *Choose Your Time Setting* screen opens.
3 Press ◄ or ► to select **Auto** or **Manual**. If you select **Auto**, the date and time are set automatically from a digital TV signal. If you select **Manual**, you can manually set the date and time. Press **ENTER**. The *Choose Your Picture Mode* screen opens.
4 Press ▲ or ▼ to highlight **Home Mode** or **Retail Mode**, then press **ENTER**. If you select **Retail Mode**, a message asks you to confirm your selection. Select **Yes** or **No**. Retail Mode is not an energy-saving mode. The *Choose Your TV Source* screen opens.
5 Press ▲ or ▼ to highlight **Antenna**, **Cable**, or **Satellite Box**, then press **ENTER**.
A. If you select **Antenna**, your TV scans for available channels. The scan may take several minutes.
B. If you select **Cable**, a message asks if you have a cable box.
- Select **No** if no cable box is connected. Your TV scans for available channels. The scan may take several minutes.
- Select **Yes** if a cable box is connected. A message asks how you connected the cable box to your TV:
- Select **AV**, **Component**, or **HDMI** if you connected a cable box to your TV using one of these cables. Read the message, then press **ENTER** to close the wizard.
- Select **Coaxial** if you connected a cable box to your TV using a coaxial cable. Read the message, then press **ENTER** to start the channel scan (VHF channels only).

C. If you select **Satellite Box**, a message asks how you connected the satellite box to your TV:
- Select **AV**, **Component**, or **HDMI** if you connected a satellite box to your TV using one of these cables. Read the message, then press **ENTER** to close the wizard.
- Select **Coaxial** if you connected a satellite box to your TV using a coaxial cable. Read the message, then press **ENTER** to start the channel scan (VHF channels only).

One-year limited warranty

Visit www.insigniaproducts.com for details.

Need additional help?

See your ***Online User Guide***! This comprehensive guide includes everything from basic how-to steps to more advanced features. A copy of your *User Guide* is not provided in the box but is available online. Go to www.insigniaproducts.com, click **Support & Service**, enter your model number in the **Product Search** field, then click **Search**.

Check out our online **community forum** at www.insigniaproducts.com for helpful information from other Insignia TV owners.

We're here for you

www.insigniaproducts.com
For customer service, call:
877-467-4289 (U.S./Canada markets)

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, MN USA 55423-3645

© 2012 BBY Solutions, Inc.
All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

WE ARE GOING GREEN!
A copy of your *User Guide* is not provided in the box but is available online.
Go to www.insigniaproducts.com, click **Support & Service**, enter your model number in the **Product Search** field, then click **Search**.